H.264 DVR

User Manual

GUI Display with USB Mouse Control

IMPORTANT SAFEGUARD



CAUTION



RISK OF ELECTRIC SHOCK

CAUTION:

To reduce the risk of electric shock, do not expose this apparatus to rain or moisture. Only operate this apparatus from the type of power source indicated on the label. The company shall not be liable for any damages arising out of any improper use, even if we have been advised of the possibility of such damages.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly "lead-free" and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.



This apparatus is manufactured to comply with the radio interference requirements.

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Disclaimer

The information in this manual was current when released. We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. For the actual display & operation, please refer to your DVR in hand. The content of this manual is subject to change without notice.

The product & company names mentioned herein may be the registered trademarks or tradenames of their respective owners.

Grounding

This is a Safety Class 1 Product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the instrument is likely to make the instrument dangerous. Intentional interruption is prohibited.

Water & Moisture

Do not expose this product to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

MPEG4 Licensing

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

GPL Licensing



This product contains codes which are developed by Third-Party-Companies and which are subject to the GNU General Public License ("GPL") or the GNU Lesser Public License ("LGPL").

The GPL Code used in this product is released without warranty and is subject to the copyright of the corresponding author.

Further source codes which are subject to the GPL-licenses are available upon request.

We are pleased to provide our modifications to the Linux Kernel, as well as a few new commands, and some tools to get you into the code. The codes are provided on the FTP site, and please download them from the following site or you can refer to your distributor:

http://download.dvrtw.com.tw/GPL/076D_Series/arm-linux-2.6.tar.gz

TABLE OF CONTENTS

| 1. BEFORE USING THIS DVR | 1 |
|---------------------------------------|----|
| 1.1 Package Content | |
| 1.3 Rear Panel | |
| 2. CONNECTION AND SETUP | |
| 2.1 SATA HDD Installation | |
| 2.2 Camera Connection | |
| 2.2.1 Normal Camera Connection | |
| 2.2.2 PTZ Camera Connection | |
| 2.3 DVR Power On | 7 |
| 2.4 Date and Time Setting | 8 |
| 2.5 Clear Hard Disk | |
| 2.6 Password Setting | 9 |
| 3. GUI DISPLAY WITH USB MOUSE CONTROL | 10 |
| 3.1 Connect USB Mouse | 10 |
| 3.2 Quick Menu Bar | 10 |
| 3.2.1 Channel Switch | 11 |
| 3.2.2 PTZ Control Panel | |
| 3.3 Main Menu | 12 |
| 4. BASIC OPERATION | 13 |
| 4.1 Live Page | 13 |
| 4.2 Record Icon | 13 |
| 4.3 Playback | |
| 4.3.1 Playback Control | |
| 4.3.2 Event Search | |
| 4.3.3 Audio Playback | |
| 4.4 User Level Switch | |
| | |
| 5. FREQUENTLY-USED FUNCTIONS | |
| 5.1 Quick Search | |
| 5.2 Record | |
| 5.2.1 Quick record setting | |
| 5.2.2 Detailed record setting | |
| 5.3.1 Record Timer | |
| 1199919 1111191 111111111111111111 | |

| 5.3.2 Detection Timer | 21 |
|--|--|
| 5.3.3 Alarm Timer | 21 |
| 5.4 Detection Setting | 22 |
| 5.5 PTZ Camera Setting | 23 |
| 5.6 System Setting | 24 |
| 5.6.1 Password Setting | 24 |
| 5.6.2 System Upgrade | 24 |
| 5.6.3 Video Backup | 25 |
| 5.6.4 Record Log Backup | 26 |
| 5.6.5 Clear All HDD Data | 27 |
| 5.7 Network | 28 |
| 5.7.1 STATIC | 28 |
| 5.7.2 PPPOE | 29 |
| 5.7.3 DHCP | 29 |
| 5.7.4 DDNS | 30 |
| 5.8 Event Notifications | 31 |
| 5.8.1 FTP | 31 |
| 5.8.2 E-MAIL | 31 |
| | |
| 6. REMOTE OPERATION | 33 |
| | |
| 6.1 Supplied Licensed Software | 33 |
| 6.1 Supplied Licensed Software | 33 |
| 6.1 Supplied Licensed Software | 33 33 |
| 6.1 Supplied Licensed Software | 33 35 35 |
| 6.1 Supplied Licensed Software | |
| 6.1 Supplied Licensed Software | 33 35 37 41 |
| 6.1 Supplied Licensed Software 6.1.1 Installation & Network Connection 6.1.2 Control Panel Overview 6.1.3. General Operation 6.1.4. E-Map 6.2 IE Web Browser 6.2.1 Event Playback & Download | 33 35 37 41 46 |
| 6.1 Supplied Licensed Software 6.1.1 Installation & Network Connection 6.1.2 Control Panel Overview 6.1.3. General Operation 6.1.4. E-Map 6.2 IE Web Browser 6.2.1 Event Playback & Download APPENDIX 1 SPECIFICATIONS | 33 35 37 41 46 48 |
| 6.1 Supplied Licensed Software 6.1.1 Installation & Network Connection 6.1.2 Control Panel Overview 6.1.3. General Operation 6.1.4. E-Map 6.2 IE Web Browser 6.2.1 Event Playback & Download APPENDIX 1 SPECIFICATIONS APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST | 33 35 37 41 46 48 |
| 6.1 Supplied Licensed Software 6.1.1 Installation & Network Connection 6.1.2 Control Panel Overview 6.1.3. General Operation 6.1.4. E-Map 6.2 IE Web Browser 6.2.1 Event Playback & Download APPENDIX 1 SPECIFICATIONS APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST | 33 35 37 41 46 48 |
| 6.1 Supplied Licensed Software | 33353741464955 |
| 6.1.1 Installation & Network Connection 6.1.2 Control Panel Overview 6.1.3. General Operation 6.1.4. E-Map 6.2 IE Web Browser | 33 35 37 41 46 49 55 56 |
| 6.1 Supplied Licensed Software 6.1.1 Installation & Network Connection 6.1.2 Control Panel Overview 6.1.3. General Operation 6.1.4. E-Map 6.2 IE Web Browser 6.2.1 Event Playback & Download APPENDIX 1 SPECIFICATIONS APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST APPENDIX 3 COMPATIBLE SATA HDD LIST APPENDIX 4 MAIN MENU STRUCTURE | 333537414649555657 |

1. BEFORE USING THIS DVR

1.1 Package Content

| Standard Package | |
|------------------------|---|
| □ DVR | ☐ HDD screws |
| ☐ Adapter | ☐ CD Manual |
| ☐ IR Remote Controller | \square Manual for IR Remote Controller |
| Optional Accessory | |
| □ Power Cord | |

1.2 Front Panel

1) LED Indicators

HDD is reading or recording.

(I) DVR is powered on.

2) $\underline{\mathsf{II}}(\blacktriangle)/\blacksquare(\blacktriangledown)/\sphericalangle(\blacktriangleleft)/\Longrightarrow(\blacktriangleright)$

Press ▲ / ▼ / ◀ / ▶ to move up / down / left / right.

In the playback mode:

Press "II" to pause playback.

Press "■" to stop playback.

Press "▶" to fast forward.

3) MENU

Press to enter the main menu.

4) <u>ENTER / </u>**←**

Press to confirm the setting.

5) SEQ. / 🖵

Press to display each channel in full screen one by one starting from CH1. When the last channel is displayed, it will repeat from CH1 again. To exit this mode, press "SEQ" again.

6) <u>H</u>

Press to show the 4 channel display mode.

7) SLOW

In the playback mode, press to show slow playback.

8) <u>ZOOM / </u>

Press to enlarge the picture of selected channel in the FRAME mode.

9) PLAY / ▶

Press to playback the latest recorded data.

10) LIST (Event List Search)

Press to quickly search the recorded files by four event lists: RECORD / MOTION / ALARM / TIME, or select FULL to show all the event logs.

To quickly search the time you want, select "QUICK SEARCH". Set the time range you want, and select "SUBMIT" to play the recorded video clip during the specified time.

11) CH1 ~ 16 / 1 ~ 8 / 1 ~ 4

Press the channel number buttons to select the channel to display.

12) <u>P.T.Z. / √ (⊞ + SEQ / □)</u>

Press "H" + "SEQ" or "D" at the same time to enter / exit the PTZ control mode.

13) AUDIO / ♠) (SLOW + ZOOM / ♣)

Press "SLOW" + "ZOOM" or "4" to select live or playback audio from the audio channel.

Live audio (indicated in white)

Playback audio (indicated in yellow)

Audio channel unselected

14) USB port

There are two USB ports on the front panel, one for connecting your USB mouse for mouse control, and the other one for connecting your USB flash drive for video backup.

Note: It's not allowed to have two USB mice or two USB flash drives connected on the front panel.

For the compatible USB flash drive list, please refer to "APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST" at page 55.

1.3 Rear Panel

1) VIDEO 1 ~ 16 / 1 ~ 8 / 1~4: Connect to the video connector of a camera.

Note: The DVR will automatically detect the video system of the camera, please make sure that the cameras are properly connected to the DVR and power-supplied before the DVR is turned on.

2) AUDIO IN

Connect to the audio connector of a camera if the camera supports audio recording.

Please get to know whether your DVR supports the audio function, and how many audio inputs are supported first.

Note: Depending on the model you have, this DVR series supports UP TO TWO audio-in channels, and the audio data will be recorded with the video data of CH1 & CH2 respectively.

For example, if your DVR supports two audio-in, its audio channels will be Audio 1 and Audio 2. When you playback CH1, you will also hear the audio recording of Audio 1.

3) AUDIO OUT

Connect to a speaker with 1 mono audio output.

Note: To know how many audio outputs your DVR supports, please refer to its specifications.

4) MONITOR

Connect to a CRT monitor for video output.

Note: For selected models, only one video output is allowed: either connected to a CRT monitor (MONITOR), or a LCD monitor (VGA).

When both MONITOR and VGA are connected, press the left key ◀ on the DVR front panel during DVR power-on to force the video output via MONITOR. For details, please refer to "4.5 Video Output Switch (For Selected Models Only)".

5) <u>VGA</u>

Connect to a LCD monitor directly.

Note: For selected models, only one video output is allowed: either connected to a CRT monitor (MONITOR), or a LCD monitor (VGA).

When both MONITOR and VGA are connected, press the left key ▶ on the DVR front panel during DVR power-on to force the video output via VGA. For details, please refer to "4.5 Video Output Switch (For Selected Models Only)".

6) EXTERNAL I/O

This port is used to connect external devices (such as speed dome cameras or external alarm, etc).

For detailed I/O port PIN configuration, please refer to "APPENDIX 6 PIN CONFIGURATION" at page 60.

7) LAN

Connect to Internet by LAN cable.

8) <u>DC 19V or 12V</u>

Connect to the supplied adapter.

9) Power Switch (For Selected Models Only)

Switch to "I" to turn on the power, and "O" to turn off the power.

Note: Some DVR models require DC19V adapters, and some require DC12V adapters. Before switching on the power, make sure the power output of your adapter suits the power requirement of your DVR.

2. CONNECTION AND SETUP

Before the DVR is powered on, make sure you have installed a hard disk and connected at least one camera. For details, please refer to the following sections.

Note: The DVR is designed to automatically detect the video system of the connected cameras (NTSC or PAL). To make sure the system detection is correct, please check if the cameras are connected to the DVR and power-supplied before the DVR is powered on.


2.1 SATA HDD Installation

A SATA HDD must be installed before the DVR is powered on.

Note: It's recommended to clear all data in the hard disk when the DVR is powered on and the date & time are set correctly to ensure the recorded data are not mixed with other data previously saved in the same hard disk. For details, please refer to "5.6.5 Clear All HDD Data" at page 26.

Step1:Loose the screws on the upper cover and remove it from the DVR. Find the two HDD brackets located on the DVR base.

Step2: Get a compatible HDD, and connect it to the power connector and data bus connector.

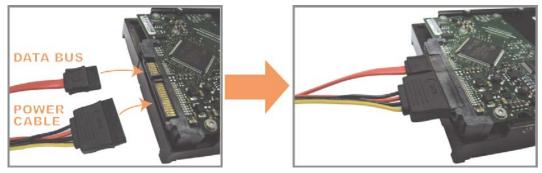

Step3: Make sure the PCB side is facing up, and place the HDD between the HDD brackets on the DVR base as shown below.

Make sure the other side of the HDD is contacted with the DVR base for heat conduction.



Step4: Align the screw hole on the each bracket with the screw hole on the each side of the HDD as shown below, and fix the HDD to the bracket with a HDD screw supplied.



Step5: Close the upper cover of the DVR, and fasten all the screws you loosened in Step 1.

2.2 Camera Connection

The cameras must be connected and power-supplied before the DVR is powered on. Connect the camera with the indicated power supply. Then, connect the camera video output to the DVR video input port with a coaxial cable or RCA cable with BNC connectors.

Note: For detailed DVR video input ports, please refer to "APPENDIX 1 SPECIFICATIONS" at page 49.

2.2.1 Normal Camera Connection

Note: For detailed camera installation and connection, please refer to its own user manual.

1) Connecting to DVR video input

Connect the camera video output to the DVR video input port with a coaxial cable or RCA line with BNC connector.

2) Connecting to DVR audio input (Optional)

Connect the camera audio output to the DVR audio input port with a coaxial cable or RCA cable with BNC connectors.


3) Connecting to power

Connect the camera with indicated power supply and make sure it's power-supplied.

2.2.2 PTZ Camera Connection

The following description is taking our brand's PTZ camera as an example.

For DVR setting to control the PTZ camera, please refer to "5.5 PTZ Camera Setting" at page 23. For detailed PTZ camera control and operation, please refer to its own user manual.

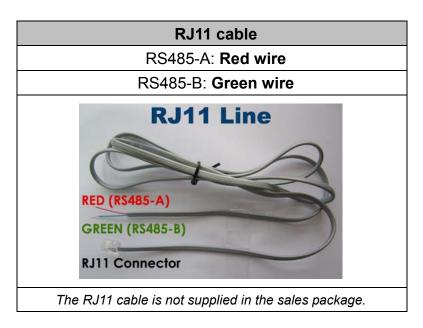

STEP 1: Get a RJ11 cable with the proper length to your connection.

Different RJ11 connector may have different wire layout, so the connection might be different. If you cannot control the DVR after connection, please reverse the RJ11 cable connection with the DVR.

STEP 2: Remove one end of the insulating coating of the RJ11 cable.

Remove one end of the insulating coating of the RJ11 cable to find the RS485-A and the RS485-B wires, and remove the insulating coating to reveal the naked wires for further connection.

STEP 3: Twist the RS485-A and RS485-B wires of the RJ11 cable and the speed dome camera together.

Twist the RS485-A (red) and RS485-B (green) wires of the RJ11 cable to the RS485-A (brown) and RS485-B (orange) wires of the speed dome camera. To protect the naked wires, use the insulation tape to cover on the twisted wires.

STEP 4: Connect the other end of the RJ11 cable to DVR.

Solder the RS485-A (red) and RS485-B (green) wires of the RJ11 cable to the corresponding pins on the solder side of the optional D-Sub connector.


For DVR PIN configuration, please refer to "APPENDIX 6 PIN CONFIGURATION" at page 60. For connection details, please check with your installer.

STEP 5: Set the speed dome camera at the DVR side.

Go to "ADVANCED CONFIG" → "DEVICES" to set the speed dome camera.

- a) Select the device to "PTZ".
- b) Set the ID to the value the same as the one set in the speed dome camera. The default ID of the camera is 000.

- c) Select the protocol to "NORMAL".
- d) Set the baud rate to the value the same as the one set in the speed dome camera. The default baud rate of the camera is 2400.

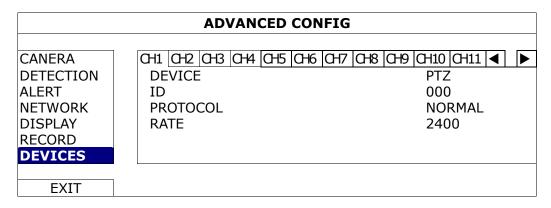

2.3 DVR Power On

This device should be operated only with the type of power source indicated on the manufacturer's label. Some DVR models require a DC19V adapter, and some require a DC12V adapter.

Note: If you connect a DC19V adapter on the DVR that must use a DC12V adapter, it will damage your hard disk.

Always use the power adapter supplied with the DVR. If you need to buy a new one, check the power requirement of your DVR first described in "APPENDIX 1 SPECIFICATIONS" at page 49, and buy a proper one.

Before your DVR is powered on, make sure:

- At least one camera is connected and power-supplied for the proper detection of camera video system.
- At least one monitor (either LCD or CRT monitor) is connected and power-supplied for proper video output.
- Your DVR adapter suits the power requirement of your DVR.

Note: To ensure that your DVR works constantly and properly, it's recommended to use an UPS, Uninterruptible Power Supply (Optional), for continuously operation.

Depending on the DVR model you have:

- Some have a power switch on the rear panel. When the adapter is connected to the power jack on the DVR rear panel, you also need to move the power switch to "I" to power on the DVR.
- Some do not have a power switch on the rear panel. When the adapter is connected to the power jack on the DVR rear panel, the DVR is powered on.

2.4 Date and Time Setting

Before operating your DVR, please set the date and time on your DVR FIRST.

Note: Please DO NOT change the date or time of your DVR after the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search. If users change the date or time accidentally when the recording function is activated, it's recommended to clear all HDD data, and start recording again.

Note: For the first time to use the DVR, please power it on for at least 48 hours continuously after the date & time is set correctly. It helps to prevent DVR time from resetting after the disconnecting of DVR power. If the DVR time resets after the disconnecting of DVR power, for example, caused by a power outage, the battery might run out and please replace the battery as described in "APPENDIX 5 DVR BATTERY REPLACEMENT" at page 59.

Right-click to enter the DVR password with the password keypad. The default administrator password is 0000. The status will be changed from (key lock) to (administrator). Then, right-click to show the main menu, and select "QUICK START" > "TIME SETUP" to set the date & time.

| | QUICK ST | ART |
|--------------------|--------------|---------------------------------|
| GENERAL TIME SETUP | DATE TIME | 2009 / NOV / 17 15 : 35 : 53 |
| EXIT | | |

2.5 Clear Hard Disk

It's recommended to clear all data in the hard disk for the first time to user this DVR to ensure the recorded data are not mixed with other data previously saved in the same hard disk.

Right-click to show the main menu, and select "SYSTEM" → "SYSTEM INFO" → "CLEAR HDD". The DVR will reboot when HDD data are cleared.

| SYSTEM | | | | |
|--|--|--|--|--|
| TOOLS SYSTEM INFO BACKUP DATA (USB) BACKUP LOG (USB) | BAUD RATE HOST ID AUTO KEY LOCK CLEAR HDD RESET DEFAULT REMOTE CONTROL ID (For Selected Models Only) | 2400 000 NEVER HDD-0 SUBMIT 000 | | |
| | SERIAL TYPE VIDEO FORMAT VERSION | RS485 NTSC 1025-1011-1011-1012 | | |
| EXIT | | | | |

2.6 Password Setting

Right-click to show the main menu, and select "SYSTEM" \rightarrow "TOOLS" to change the DVR password.

There are two user levels: ADMIN & OPERATOR. For details, please refer to "4.4 User Level Switch" at page 15.

| SYSTEM | | | |
|--|--|---|--|
| TOOLS SYSTEM INFO BACKUP DATA (USB) BACKUP LOG (USB) | LANGUAGE ADMIN PASSWORD OPERATOR PASSWORD UPGRADE BACKUP CONFIG RESTORE CONFIG | ENGLISH SETUP SETUP SUBMIT SUBMIT SUBMIT | |
| EXIT | | | |

3. GUI DISPLAY WITH USB MOUSE CONTROL

3.1 Connect USB Mouse

Connect your USB mouse to one of the USB ports on the DVR front panel, and check if there's a mouse icon ((*\varphi)) on the screen, indicating the USB mouse is detected properly.

Move your mouse to enter the DVR password with the password keypad. The default administrator password is **0000**. The status will be changed from (key lock) to (administrator), and the guick menu bar appears on the left side of the screen.

Note: There are two user levels for DVR access which can be set in the main menu "SYSTEM" → "TOOLS". For details, please refer to "4.4 User Level Switch" at page 15.

Password Input



Quick Menu: Close



3.2 Quick Menu Bar

Move to the arrow mark to extend the quick menu bar and show the five functions as follows:

Quick Menu: Open





Click to show the channel switch panel and select the channel you want. For details, please refer to "3.2.1 Channel Switch" at page 11.



Click to display the playback control panel, and click to play the latest recorded video clip, or click to enter the search list. For details, please refer to "4.3 Playback" at page 14.



Switch to the channel you want first, and click to enter the zoom-in mode. In this mode, click and drag the red frame on the bottom left of the screen to move to the place you want to see. To exit this mode, click .



Click to select the audio channel you want: In the live mode, only the live audio channels can be selected.

In the playback mode, live and playback audio channels can be selected.



Click to enter the PTZ mode and show the PTZ camera control panel. For details, please refer to "3.2.2 PTZ Control Panel" at page 11.



Click to show the power off panel to either halt or reboot the system.

3.2.1 Channel Switch

Click **!** on the quick menu bar to display the panel as follows:

Note: The buttons available depend on the model you have.




| 1~16 / 1~8 / 1~4 | Video Channel Number | Click to switch to the channel you want in full screen. | |
|------------------|--|---|--|
| | Sequence Display | Click to display each channel in full screen one by one starting from CH1. When the last channel is displayed, it will repeat from CH1 again. When this function is on, will be shown on the status bar. | |
| | Quad Display | Press to show the 4-channel display mode. | |
| | 9-Cut Display (For Selected Models Only) | Press to show the 9-channel display mode. | |
| | 16-Cut Display (For Selected Models Only) | Press to show the 16-channel display mode. | |

3.2.2 PTZ Control Panel

Note: In the PTZ control mode, hot point is supported to move the camera view to the specified point after a click.

Click on the quick menu bar to display the panel as follows:

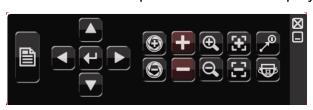

| | Camera Menu | Click to enter the camera main menu. For details about each camera menu, please refer to its own user manual. |
|---------------------|-----------------------------|--|
| + | Enter | Click to confirm your selection / enter the menu. |
| | Up / Down / Left / Right | Click to move your selection up / down / left / right, or change settings. |
| (D) | Iris + / Iris - | This two buttons are designed for the PTZ camera which uses Pelco-D to control. To know the actions after clicking Iris + and Iris -, please refer to the camera's user manual. |
| + / - | Zoom in / out max | Click to zoom in on the image to the largest / zoom out on the image to its original size. |
| e / e | Zoom in / out | Click to zoom in / out the image. |
| 3 / 3 | Focus near / far | Click to adjust the focus of the image. |
| (| Auto mode | Click to activate the auto function. Before using it, you need to assign a specific function that will be enabled when "" is clicked. For details, please refer to the user manual of the PTZ camera. |
| 7 | Preset point | Click to enter the PTZ preset point you want to see. |

3.3 Main Menu

Right-click anywhere on the screen to show the main menu as follows, and right-click again to exit.

For details about the menu structure, please refer to "APPENDIX 4 MAIN MENU STRUCTURE" at page 57.


Main Menu



| <u> </u> | QUICK START | Click to set the status display, image settings, and date & time. |
|----------|----------------------|--|
| 6, | DATE SETUP | Click to set the date display and daylight saving. |
| i | SYSTEM | Click to set the system configurations. |
| ((1)) | EVENT INFORMATION | Click to enter the event search menu. |
| ٢ | ADVANCED CONFIG | Click to set CAMERA, DETECTION, ALERT, NETWORK, DISPLAY, RECORD and DEVICES. |
| ب. | SCHEDULE SETTING | Click to set record timer, detection timer & alarm timer. |

4. BASIC OPERATION

4.1 Live Page

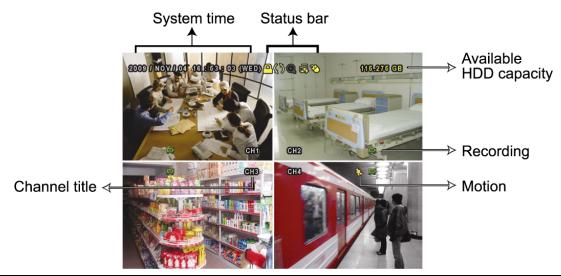

| Icon | Function | Icon | Function | Icon | Function |
|------------|--|------------|------------------------------------|-------------------|-------------------------|
| 4 | Live audio channel (1~2) | (1) | Playback audio channel (1~2) | 4 | Audio channel off |
| Q | Digital zoom on | (| Digital zoom off | ® | Timer recording |
| Q | Network disconnected | 4 | Internet connected | Ø | LAN connected |
| 8 | USB mouse connected | ⇔ | USB flash drive / device connected | 633 | No USB device connected |
| <u>_</u> | Key lock | a | PTZ mode on | CD | HDD overwrite |
| <u> </u> | Administrator | 2 | Operator | | Sequence |
| € | Motion | 2 | Recording | (00) | Alarm |
| K 2 V 9 | Record mode: Frame (For Selected Model Only) | | Record mode: CIF | | |

4.2 Record Icon

1) Manual Recording

By defaults, manual recording is on () when the DVR is powered on and a HDD is installed.

2) Event Recording

When the motion detection or alarm is on, the motion icon $(\begin{cases} \begin{cases} \begin{case$

3) <u>Timer Recording</u>

When timer recording is on, you will see "9" on the screen.

4) HDD Overwritten

Be defaults, the HDD overwritten function is set to ON, and "\" will be shown on the screen.

4.3 Playback

Click "\overline" on the quick menu bar to display the playback control panel, and click led to play the latest recorded video clip, or click to enter the search list.



Note: There must be at least 8192 images of recorded data for playback to work properly. If not, the device will stop playback. For example, if the IPS is set to 30, the recording time should be at least 273 seconds (8192 images / 30 IPS) for the playback to work properly.

Note: During playback, the image size of the recording (FRAME, FIELD or CIF) will be shown on the screen.

4.3.1 Playback Control

| >> | Fast Forward | Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 32X. |
|-------------------------|-------------------------|--|
| * | Fast Rewind | Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 32X. |
| > / II | Play / Pause | Click to play the latest recorded video clip immediately, and click again to pause. In the pause mode, click once to get one frame forward, and click to get one frame rewind. |
| | Stop | Click to stop the video playback. |
| >> | Slow Playback | Click once to get 1/4X speed playback, and click twice to get 1/8X speed playback. |
| K / M | Previous / Next Hour | Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour. |
| A↔B | Repeat | Click to set point A and point B in a video clip, and the system will play only the specified range in that clip. |
| | Backup | Click to open the backup menu for video backup. |

4.3.2 Event Search

Click to quickly search the recorded files by four event lists: RECORD / MOTION / ALARM / TIME, or select FULL to show all the event logs.

To quickly search the time you want, select "QUICK SEARCH". Set the time range you want, and select "SUBMIT" to play the recorded video clip during the specified time.

4.3.3 Audio Playback

In the playback mode, click on the quick menu bar as many times as needed to select live or playback audio from the audio channel.



Live audio (indicated in white).



Playback audio (indicated in yellow).



Audio channel unselected

Note: To make a video backup with audio, make sure the camera which supports the audio function is connected to the video-in channel and audio-in channel. For example, the audio data from the audio channel 1 will be recorded with the video data from the video channel 1.

4.4 User Level Switch

In the key lock mode ($^{\square}$), move your USB mouse to display the password input keypad. There are two user levels for accessing the DVR: Administrator ($^{\square}$) & Operator ($^{\square}$).

When the administrator password is entered, a will be shown on the status bar of the screen and all operations are allowed. The default administrator password is 0000.

When the operator password is entered, \triangle will be shown on the status bar of the screen, and the main menu is **NOT** allowed to access. The operator user level needs to be set in the main menu "SYSTEM" \rightarrow "TOOLS".

To switch between these two user levels, click the current user level icon to switch to the key lock mode, and move your mouse to show the password input keypad, and enter the password of the user level you want.

4.5 Video Output Switch (For Selected Models Only)

Note: Check the monitor (either LCD or CRT monitor) is connected to the DVR before the DVR is powered on for correct video output detection.

It's not allowed to have video output simultaneously on a CRT monitor (connected to MONITOR) and LCD monitor (connected to VGA).

The default video output setting is "AUTO", meaning the DVR will automatically detect the video output source. When VGA and MONITOR are both connected, the default monitor output is VGA.

To change the video output setting manually:

- To force the video output via MONITOR, press the left key ◀ on the DVR front panel at DVR power-on.
- To force the video output via VGA, press the right key ▶ on the DVR front panel at DVR power-on.

The setting is changed when you hear a short beep sound.

OR:

When the DVR is powered on and initialized, right-click to show the main menu, and select "ADVANCED CONFIG" → "DISPLAY" → "DISPLAY OUTPUT PATH".


Select "VGA" to switch to the connected LCD monitor, or "COMPOSITE" to switch to the connected CRT monitor. The DVR will then reboot for the change to take effect.

| ADVANCED CONFIG | | | |
|-----------------|----------------------|----------|--|
| | | | |
| CAMERA | FULL SCREEN DURATION | 03 | |
| DETECTION | DISPLAY COVERT | ON | |
| ALERT | HDD DISPLAY MODE | HDD SIZE | |
| NETWORK | DISPLAY OUTPUT PATH | AUTO | |
| DISPLAY | | | |
| RECORD | | | |
| DEVICES | | | |
| | | | |
| | | | |
| EXIT | | | |

5. FREQUENTLY-USED FUNCTIONS

5.1 Quick Search

Press "LIST" on the DVR front panel to enter the time search menu as follows:

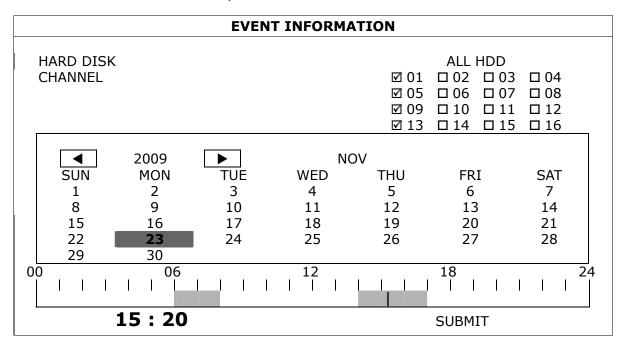

- Step1: Select the hard disk and channel including the video data you want to search.
- Step2: Select the month including the video data you want to search from the calendar, and the date with recorded data will be highlighted.
- Step3: Select the date you want from the calendar, and the time with recorded data will be highlighted from the time scale bar.
- Step4: To immediately play the video clip, click "SUBMIT".

 To choose the start time for video playback, move your mouse cursor to the highlighted time, and click to confirm the time when the time display below is the time you want. The video playback is activated right away when you confirm the time.


5.2 Record

5.2.1 Quick record setting

Right-click to display the main menu, and select "QUICK START" → "GENERAL".

For selected models only, you might see one of the following two menu types:

> Type 1

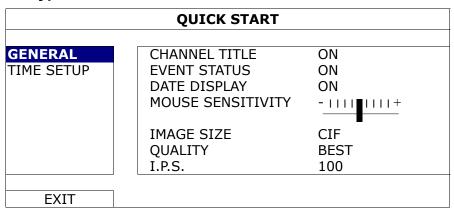

1) IMAGE SIZE

Some models allow users to choose between FRAME and CIF, and some models only support CIF.


2) QUALITY

Select one of the 3 quality options: BEST, HIGH & NORMAL.

3) I.P.S.

Select the images per second for MANUAL RECORD.

> Type 2

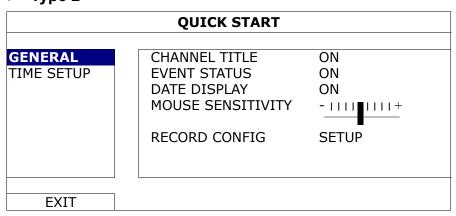

1) RECORD CONFIG

Click "SETUP" to enter the setting page individually for manual record, event record and timer record.

a) Select the record type you want to set.

b) In "CHANNEL", select "ALL" to apply the changes here to all channels.

| | Ç | UICK START | | |
|--------------|------------|------------|---------|------|
| MANUAL EVENT | TIMER | | | |
| CHANNEL | IMAGE SIZE | I.P.S. | QUALITY | |
| ALL | CIF | 100 | BEST | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | EXIT |
| | | | | |

Or, select "BY CHANNEL" to set the image size, image per second & image quality individually for each channel.

| QUICK START | | | | | | | |
|-------------|-----------|-----------------|-------|--------|------|-------------|------|
| MANUAL | EVENT | TIMER | | | | | |
| CHANNE | L | IMAGE SI | ZE | I.P.S. | Ç | UALITY | , |
| CH1 | | FRAME | | 25 | В | EST | |
| CH2 | | FRAME | | 25 | В | EST | |
| CH3 | | FRAME | | 25 | В | EST | |
| CH4 | | FRAME | | 12.5 | В | EST | |
| CH5 | | FRAME | | 6.25 | В | EST | |
| CH6 | | FRAME | | 3.13 | В | EST | |
| CH7 | | FRAME | | 1.56 | В | EST | |
| CH8 | | FRAME | | 1.56 | В | EST | |
| AVAILAB | LE IPS: C | CIF 0 / FRA | AME 0 | | | | |
| | | | | | APPL | 1 | EXIT |
| | | | | | | | |

5.2.2 Detailed record setting

Right-click to display the main menu, and select "ADVANCED CONFIG" → "RECORD".

Note: Please DO NOT change the date or time of your DVR after the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search. If users change the date or time accidentally when the recording function is activated, it's recommended to clear all HDD data, and start recording again.

| ADVANCED CONFIG | | | | |
|-----------------|---|--------|--|--|
| CAMERA | MANUAL RECORD | ON | | |
| DETECTION | EVENT RECORD | ON | | |
| ALERT | TIMER RECORD | ON | | |
| NETWORK | EVENT RECORD IPS (For Selected Models Only) | 100 | | |
| DISPLAY | TIMER RECORD IPS (For Selected Models Only) | 100 | | |
| RECORD | PRE-ALARM RECORD | ON | | |
| DEVICES | OVERWRITE | ON | | |
| | KEEP DATA LIMIT (DAYS) | OFF | | |
| | RECORD CONFIG (For Selected Models Only) | SUBMIT | | |
| | | | | |
| EXIT | | | | |

1) MANUAL RECORD

Set the manual recording function on / off.

2) EVENT RECORD

Set the event recording function on / off.

3) TIMER RECORD

Set the timer recording function on / off.

4) EVENT RECORD IPS (For Selected Models Only)

Select the images per second for EVENT RECORD (Recording that is triggered by alarm or motion).

5) TIMER RECORD IPS (For Selected Models Only)

Select the images per second for TIMER RECORD (Recording that is activated according to the scheduled time).

6) PRE-ALARM RECORD

Select to enable or disable the pre-alarm function (ON / OFF).

When pre-alarm and event recording functions are both activated, the DVR will record 8MB data before an alarm / motion event is triggered.

7) OVERWRITE

Select "ON" to overwrite previous recorded data in your HDD when the HDD is full. When this function is on and the HDD is full, the DVR will clear 8GB data from the oldest for continuous recording without notice.

8) KEEP DATA LIMIT (DAYS)

Assign the maximum recording days from 01 to 31 after which all the recorded data will be removed, or select "OFF" to disable this function.

9) RECORD CONFIG (For Selected Models Only)

Click "SETUP" to enter the setting page individually for manual record, event record and timer record.


For details, please refer to "5.2.1 Quick record setting" at page 18.

5.3 Schedule Setting

Right-click to display the main menu, and select "SCHEDULE SETTING".

5.3.1 Record Timer

Click "RECORD". In "RECORD TIMER", select "ON" to enable record timer, and select the day and time for this function.

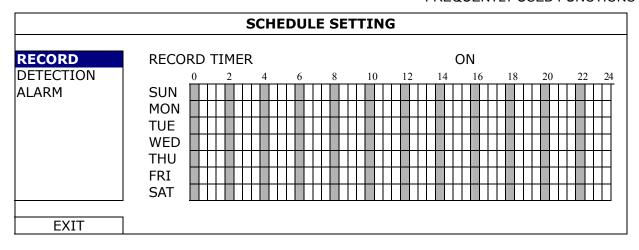


X axis: $0 \sim 24$ hours. Each time bar is 30 minutes.

Yaxis: Monday ~ Sunday.

5.3.2 Detection Timer

Click "DETECTION". In "DETECTION TIMER", select "ON" to enable detection timer, and select the day and time for this function.

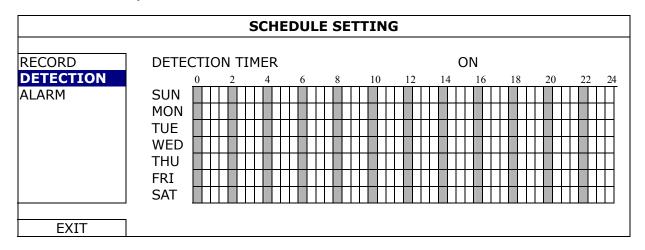


X axis: $0 \sim 24$ hours. Each time bar is 30 minutes.

Yaxis: Monday ~ Sunday.

5.3.3 Alarm Timer

Click "ALARM". In "ALARM TIMER", select "ON" to enable alarm timer, and select the day and time for this function.

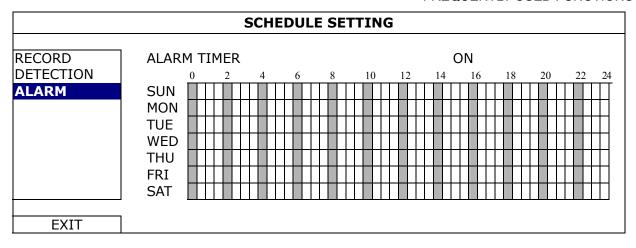


X axis: $0 \sim 24$ hours. Each time bar is 30 minutes.

Yaxis: Monday ~ Sunday.

5.4 Detection Setting

Right-click to display the main menu, and select "ADVANCED CONFIG" → "DETECTION".

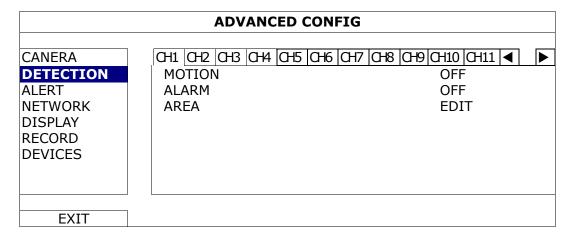

1) MOTION

Select the detection sensitivity to LOW / NORMAL / HIGH, or disable the motion detection function for the selected channel (OFF).

2) ALARM

Select N.C./ N.O depending on your installation need. The default alarm value is OFF.


3) AREA

Click "EDIT" to set the motion detection area.

There are 16×12 grids per camera for all channels. Pink blocks represent the area that is not being detected while the transparent blocks are the area under detection.

5.5 PTZ Camera Setting

Right-click to display the main menu, and select "ADVANCED CONFIG" → "DEVICES".

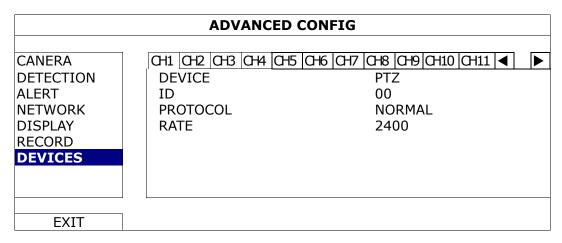

1) DEVICE

For the PTZ camera, select "PTZ".

4) <u>ID</u>

Click the current value to set the ID number (0 \sim 255) for the connected PTZ camera if necessary.

Make sure the ID setting of the camera is the same as the setting here, or the DVR will not be able to control the device.

Note: To know the default ID of the PTZ camera, please refer to its user manual.

5) PROTOCOL

Select NORMAL (our protocol), P-D (PELCO-D) or P-P (PELCO-P) protocol.

6) RATE

Select the baud rate for the connected PTZ camera (2400 / 4800 / 9600 / 19200 / 57600 / 115200).

Make sure the baud rate setting of the camera is the same as the setting here, or the DVR will not be able to control the device.

Note: To know the default baud rate of the PTZ camera, please refer to its user manual.

5.6 System Setting

5.6.1 Password Setting

Right-click to display the main menu, and select "SYSTEM" → "TOOLS".

| SYSTEM | | | | |
|--|--|---|--|--|
| TOOLS SYSTEM INFO BACKUP DATA (USB) BACKUP LOG (USB) | LANGUAGE ADMIN PASSWORD OPERATOR PASSWORD UPGRADE BACKUP CONFIG RESTORE CONFIG | ENGLISH SETUP SETUP SUBMIT SUBMIT SUBMIT | | |
| EXIT | | | | |

1) ADMIN PASSWORD

Click "SETUP" to change the administrator password. The default administrator password is **0000**.

When you're prompted to enter the DVR password, enter the administrator password, and all operations are allowed.

2) OPERATOR PASSWORD

Click "SETUP" to set or change the operator password. .

When you're prompted to enter the DVR password, enter the operator password, and \triangle will be shown on the status bar of the screen and the main menu is **NOT** allowed to access.

5.6.2 System Upgrade

Note: DVR system upgrade might cause all HDD data cleared when your current system version is too old from the latest version. Therefore, before upgrading the DVR system, check your current firmware version with your installer or distributor, and make video backup if necessary.

Right-click to display the main menu, and select "SYSTEM" → "TOOLS" → "UPGRADE".

Save the upgrade files obtained from your installer or distributor in a compatible USB flash drive, and insert it into the USB port at the front panel.

Then, click "SUBMIT" to start upgrading.

Note: Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to "APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST" at page 55.

5.6.3 Video Backup

Right-click to display the main menu, and select "SYSTEM" → "BACKUP DATA (USB)".

Insert a compatible USB flash drive to the USB port at the front panel.

Note: Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to "APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST" at page 55.

| SYSTEM | | | | | |
|--|--|--|--|--|--|
| TOOLS SYSTEM INFO BACKUP DATA (USB) BACKUP LOG (USB) | START DATE 2009/NOV/19 START TIME 08:30:21 END DATE 2009/NOV/19 END TIME 17:59:29 CHANNEL Ø 01 02 03 04 Ø 05 □ 06 □ 07 □ 08 Ø 09 □ 10 □ 11 □ 12 Ø 13 □ 14 □ 15 □ 16 HARD DISK ALL HDD BACKUP SUBMIT REQUIRE SIZE: 554MB SUBMIT | | | | |
| EXIT | AVAILABLE SIZE: 3788.0MB | | | | |

1) START DATE / START TIME

Select the start date & time.

2) END DATE / TIME

Select the end date & time.

3) CHANNEL

Click to select the channel(s).

4) HARD DISK

Select the hard disk containing the video data you need or "ALL HDD".

5) BACKUP

Click "SUBMIT" to start backup.

6) REQUIRE SIZE

To know the size of the expected backup video before backup, click "SUBMIT" to start calculating.

■ Backup File Playback (For 16CH & 8CH Models Only)

During the backup process, a file player installer "PLAYER.EXE" will also be copied into your USB flash drive or disk, and you will see the message "CHECK PLAYER" shown on the screen.

Insert your USB flash drive to your PC. Install the file player "PLAYER.EXE", and double click a backup file to play it directly in your PC and see if the backup is successful.

■ Backup File Playback (For 4CH Models Only)

Please go to

http://download.dvrtw.com.tw/AP/Video Player/VideoPlayer setup.zip to download the installer of video player to your computer, and double-click it to complete the installation.

Note: If you have already installed our CMS program, Video Viewer, in your computer, please skip this step.

Then, insert the USB flash drive to your computer, double click a backup file to play it directly in your computer and see if the backup is successful.

Note: The supported PC operating systems are Windows 7, Vista & XP.

5.6.4 Record Log Backup

Right-click to display the main menu, and select "SYSTEM" → "BACKUP LOG (USB)" This function is used to backup the record log.

Insert a compatible USB flash drive to the USB port at the front panel.

Note: Before using the USB flash drive, please use your PC to format the USB flash drive to FAT32 format first. For the list of compatible USB flash drives, please refer to "APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST" at page 55.

| SYSTEM | | | | |
|-------------------|------------------------|---------------------|--|--|
| TOOLS | START DATE 2009/NOV/19 | | | |
| SYSTEM INFO | START TIME | 08:30:21 | | |
| BACKUP DATA (USB) | END DATE | 2009/NOV/19 | | |
| BACKUP LOG (USB) | END TIME | 17:59:29 | | |
| | CHANNEL | ☑ 01 □ 02 □ 03 □ 04 | | |
| | | ☑ 05 □ 06 □ 07 □ 08 | | |
| | | ☑ 09 □ 10 □ 11 □ 12 | | |
| | | ☑ 13 □ 14 □ 15 □ 16 | | |
| | DATA TYPE | SETUP | | |
| | BACKUP | SUBMIT | | |
| FXIT | L | | | |
| ΕΛΙΙ | | | | |

1) START DATE / START TIME

Select the start date & time.

2) END DATE / TIME

Select the end date & time.

3) CHANNEL

Click to select the channel(s).

4) DATA TYPE

Click "SETUP" to select the event type you want: MANUAL / MOTION / ALARM / SYSTEM / TIMER, or select "SELECT ALL" to choose all event types.

5) BACKUP

Click "SUBMIT" to start backup. You'll see a log file (.csv) in the flash drive.

5.6.5 Clear All HDD Data

Right-click to show the main menu, and select "SYSTEM" → "SYSTEM INFO" → "CLEAR HDD".

| SYSTEM | | | | |
|--|---|--|--|--|
| TOOLS SYSTEM INFO BACKUP DATA (USB) BACKUP LOG (USB) | BAUD RATE HOST ID AUTO KEY LOCK CLEAR HDD RESET DEFAULT REMOTE CONTROL ID (For Selected Models Only) SERIAL TYPE VIDEO FORMAT VERSION | 2400 000 NEVER HDD-0 SUBMIT 000 RS48 NTS0 | | |
| EXIT | | | | |

Select the HDD you want to clear, and click "YES" to confirm or "NO" to cancel.

It's recommended to clear all data in the hard disk when:

- It's the first time to use this DVR to ensure the recorded data are not mixed with other data previously saved in the same hard disk.
- DVR date and time are changed accidentally when the recording function is activated. Otherwise, the recorded data will be disordered and you will not be able to find the recorded file to backup by time search.

5.7 Network

5.7.1 STATIC

| ADVANCED CONFIG | | | | |
|-------------------------|--|------------------------------------|--|--|
| CANERA DETECTION | NETWORK SNTP FTP E-MAI NETWORK TYPE | L DDNS STATIC | | |
| ALERT NETWORK | IP GATEWAY | 192.168.001.010 192.168.001.254 | | |
| DISPLAY RECORD | NETMASK PRIMARY DNS | 255.255.255.000 168.095.001.001 | | |
| DEVICES | SECONDARY DNS PORT | 139.175.055.244 0080 | | |
| EXIT | | | | |

1) <u>NETWORK TYPE</u>

Select the network type as STATIC and set all the information needed in the DVR.

2) <u>NETWORK INFORMATION (IP / GATEWAY / NETMASK)</u>

Key in all the network information obtained from your ISP (Internet Service Provider).

3) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

4) PORT

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

5.7.2 PPPOE

Note: When PPPOE configuration is completed, please move to "DDNS" to configure the DDNS service.

| ADVANCED CONFIG | | | | | |
|---|--|--|--|--|--|
| CANERA DETECTION ALERT NETWORK DISPLAY RECORD DEVICES | NETWORK SNTP FTP E-MAIL DDNS NETWORK TYPE PPPOE IP 192.168.001.010 GATEWAY 192.168.001.254 NETMASK 255.255.255.000 PRIMARY DNS 168.095.001.001 SECONDARY DNS 139.175.055.244 PORT 0080 USER NAME OFFICE PASSWORD ●●●●●●● | | | | |
| EXIT | | | | | |

1) <u>NETWORK TYPE</u>

Select the network type as PPPOE and set all the information needed in the DVR.

2) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

3) <u>PORT</u>

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

4) <u>USER NAME / PASSWORD</u>

Set "username" and "password" subscribed from your ISP supplier

5.7.3 DHCP

Note: When DHCP configuration is completed, please move to "DDNS" to configure the DDNS service.

| ADVANCED CONFIG | | | | |
|------------------------------|---|--|--|--|
| CANERA DETECTION | NETWORK SNTP FTP E-MAIL DDNS NETWORK TYPE DHCP | | | |
| ALERT NETWORK | IP 192.168.001.010 GATEWAY 192.168.001.254 | | | |
| DISPLAY RECORD DEVICES | NETMASK 255.255.255.000 PRIMARY DNS 168.095.001.001 SECONDARY DNS 139.175.055.244 | | | |
| EXIT | PORT 0080 | | | |

1) NETWORK TYPE

Select the network type as DHCP.

2) DNS (PRIMARY DNS / SECONDARY DNS)

Key in the IP address of the domain name server obtained from your ISP (Internet Service Provider).

3) <u>PORT</u>

The valid number ranges from 1 to 9999. The default value is 80. Typically, the TCP port used by HTTP is 80. However in some cases, it is better to change this port number for added flexibility or security.

5.7.4 DDNS

You need to additionally set DDNS when your network type is PPPOE or DHCP.

We have our own DDNS server for quick DDNS service configuration. You don't need to additionally apply a DDNS service.

- To use our own DDNS server, select "default" in "SYSTEM NAME".
- The default host name is the MAC address of the DVR.
 Then, note down the whole address under "CURRENT HOST ADDRESS", such as MAC000E5318B3F0@ddns.dvrtw.com.tw. This is the default IP address used to access your DVR remotely.

Note: Please at least use the default address to access your DVR remotely once. This is to ensure our DDNS server has your DVR registered. Then, you may change the host name to a more meaningful name to memorize later here.

Note: If you want to additionally apply a DDNS service instead of using ours, please refer to http://www.surveillance-download.com/user/CMS.pdf and check "Appendix 2" for details.

| ADVANCED CONFIG | | | | | |
|---|---|--|--|--|--|
| CANERA DETECTION ALERT | NETWORK SNTP FTP E-MAIL DDNS DDNS ON SYSTEM NAME default | | | | |
| NETWORK DISPLAY RECORD DEVICES | HOST NAME MAC000E5318B3F0 EMAIL EMPTY | | | | |
| EXIT | CURRENT HOST ADDRESS MAC000E5318B3F0@ddns.dvrtw.com.tw | | | | |

5.8 Event Notifications

It's available to set event notifications to FTP / E-Mail from this DVR.


5.8.1 FTP

When this function is enabled and an event occurs, a html file including a link will be sent to the specified FTP site. Click the link to access to this DVR and check the event recording.

| ADVANCED CONFIG | | | | |
|--------------------|------------------------|----------------------|--|--|
| CANERA | NETWORK SNTP F | TP E-MAIL DDNS | | |
| DETECTION ALERT | FTP ALERT USER NAME | ON MANAGER | | |
| NETWORK | PASSWORD | 00000 | | |
| DISPLAY RECORD | SERVER PORT | 192.168.2.32 0021 | | |
| DEVICES | DIRECTORY | UPLOAD | | |
| EXIT | | | | |

5.8.2 E-MAIL

When this function is enabled and an event occurs, a html file including a link will be sent to the specified E-mail address. Click the link to access to this DVR and check the event recording.

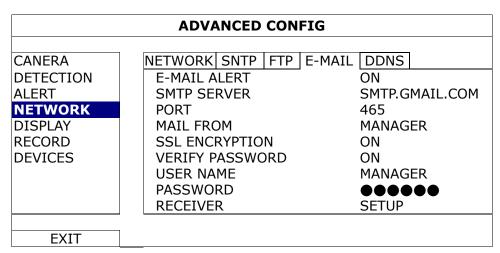

1) E-MAIL ALERT

Select "ON" to enable this function, or "OFF" to disable this function.

2) <u>SMTP SERVER</u>

Enter the SMTP server address provided from your e-mail system supplier.

3) PORT

Enter the port number provided from your e-mail system supplier. If this column is left blank, the e-mail server will use port 25 to send e-mails.

4) MAIL FROM

Enter the sender's name.

5) SSL ENCRYPTION

Select "ON" if your e-mail server is using SSL encryption to protect your e-mail content from unauthorized access.

6) <u>VERIFY PASSWORD</u>

Some mail servers are required to verify the password. Please enter the "user name" and "password".

7) <u>USER NAME / PASSWORD</u>

Enter the "user name" and "password" when "VERIFY PASSWORD" is set to "ON".

8) <u>RECEIVER</u>

Select "SETUP" to add up to 15 e-mail addresses of the assigned recipients.

6. REMOTE OPERATION

You can also control the DVR remotely via the supplied licensed software "Video Viewer", Internet Explorer web browser, and Apple's QuickTime player.

6.1 Supplied Licensed Software

The sections below describe frequently-used functions of the Video Viewer. For details about this software and network settings, please download its extended user manual from the following link:

http://www.surveillance-download.com/user/CMS.pdf

6.1.1 Installation & Network Connection

1) <u>Install the software</u>

- Step1: Place the supplied CD into your CD-ROM or DVD-ROM drive. The program will be automatically run.
- Step2: Click "Download The Latest Version" under "Licensed Software AP" to download the latest version of Video Viewer from the Internet.
- Step3: Follow the on-screen instructions to finish the installation. When the installation is completed, a shortcut icon "" will be placed on your PC desktop.

2) Network Connection

Local Connection (via LAN)

LAN is used when it's the first time to remotely access the DVR and you need to configure the network setting of your DVR based on your network type in advance.

a) Connect the DVR to your PC via a RJ45 network cable. The default DVR values are as follows:

| Item | Default Value |
|------------|---------------|
| IP address | 192.168.1.10 |
| User name | admin |
| Password | admin |
| Port | 80 |

- b) Set the PC's IP address as "192.168.1.XXX" (1~255, except 10) in order to make the PC and DVR under the same domain.
- c) Double-click "Property icon on your PC desktop to enter the control panel. By defaults, the "Address Book" panel will be displayed on the right side of the

control panel.

d) Click "

" → "

" to key in the default IP address, user name, password, and port number of the DVR you intend to connect.

OR

Click "Q" → " to search the available IP address(es) of other DVR(s) under the same domain as your PC's IP address. The found address(es) will be listed, and can be added into the address book by clicking "Quitality".

e) Double-click the IP address you just added into the address book to log in.

Remote Connection (via Internet)

When the network configuration of your DVR is completed, you can access your DVR remotely via Internet.

- a) Double-click "P" icon on your PC desktop to enter the control panel. By defaults, the "Address Book" panel will be displayed on the right side of the control panel.
- b) Click " → " to key in the IP address, user name, password, and port number of the DVR you intend to connect.


OR

c) Double-click the IP address you just added into the address book to log in.

6.1.2 Control Panel Overview

Two control panels are available and can be switched depending on your use habit.

Simplified Version (Default)

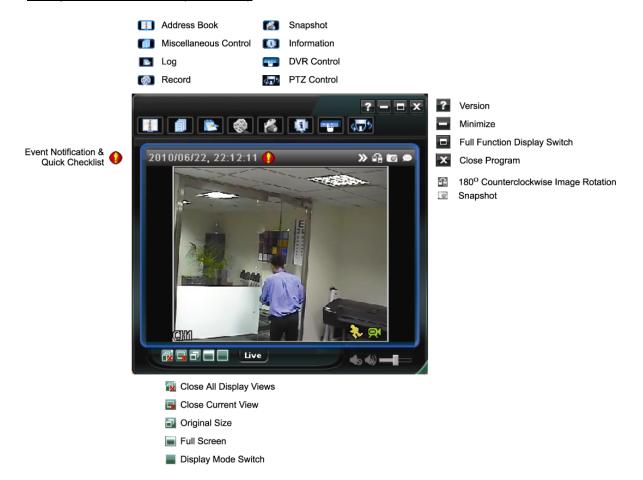

Full Function Version



Main Button Overview


| Button | | Function | Description | | |
|------------|---------------|--------------------------|---|-------------------|--|
| Simplified | Full Function | Function | Description | | |
| -ingredies | an | Address Book | Click to show the predefined IP address(es). You can add, remove or search the IP address to log in the DVR remotely. | | |
| | | Miscellaneous Control | A | Remote Config | Click to go into the detailed DVR setting. |
| | | | | Record Setting | Click to go to the detailed record setting. |
| | | | | Custom Setting | Click to choose the language of this program. The language change will take effect when this program is closed and executed again. |
| | | Log | Click to view all event and recording logs, search the desired log(s) by date, or playback the recording of the selected log. | | |

| Button | | Function | Description | |
|--------------|---------------------|-------------------------|---|--|
| Simplified | Full Function | Function | Description | |
| (*) | ⊕ , ⊗ | Record / Record Stop | Click to start / stop the manual recording. | |
| *** | O | Snapshot | Click to take a snapshot of the current view. The snapshot will be saved in the path you specified in "Record Setting". | |
| <u>O</u> | 0 | Information | Click to show the current network connection details. | |
| | | DVR Control | Click to go to the DVR control panel to operate the DVR remotely. | |
| ₩. | | PTZ Control | Click to go to the PTZ camera control panel to operate the connected PTZ camera. | |

6.1.3. General Operation

Record

To record remotely at the same time for any event or alarm at the DVR side, click " \blacksquare " or " \blacksquare " to go to the "Record Setting" page.

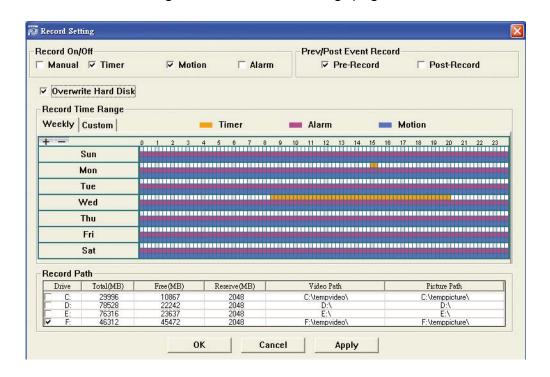

In the "Record Setting" page, you can set the following items:

- Record type
- · Hard disk overwriting
- · Pre- / post-alarm record
- · Record time setting


· Record path

If "Manual" is checked, click " or " on the main control panel to start the manual recording immediately, and the recordings will be saved in the specified location.

If "Motion" and / or "Alarm" are checked, the recording function will also be enabled at the remote side when any event is triggered at the DVR side, and the recordings will be saved in the specified location.

Playback

To play a recording, click "Less" or "Less", and select the "Record" tab or "Backup" tab. A list of all the recordings will be shown by defaults, and you can also sort out the logs you want to speed up the search time.

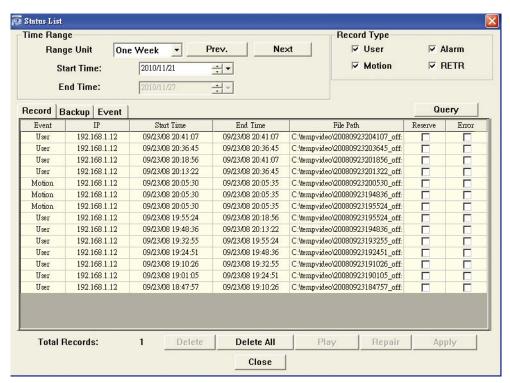


To immediately play a recording, select a log from the list, and click "Play", or double-click the selected log.

Network Backup

Click "III" → "III", or click "III" to go into the "Backup" page as follows, and you can select a specific time range or event to make a video backup remotely.

The file(s) you backup will be from the currently selected IP address.

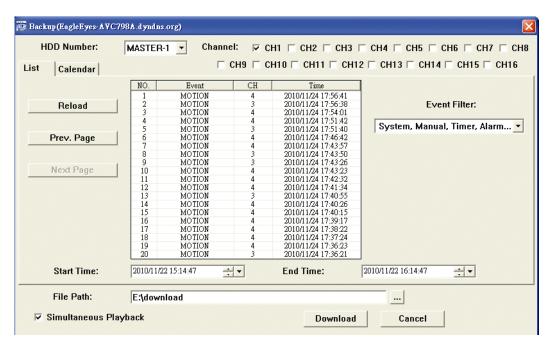

| Function | Description |
|-----------------------|--|
| HDD Number / Channel | Specify the hard disk (HDD Number) and channel number (Channel) within which have the video data you need. |
| Download by Time | Specify the time range within which has the video data you want in the "Start Time" and "End Time" columns. |
| Download by Event | Select an event log from the event list. This list shows all logs in the specified DVR from the latest to the earliest. • To quickly find the events you need, check or uncheck the event type "System" / "Manual" / "Alarm" / "Motion", and select the log you want. • To view the earlier or later logs that are not shown in the current page, click "Prev. Page" or "Next Page". • To refresh the event list, click "Reload". |
| File Path | Assign the location where the backup files are saved. |
| Simultaneous Playback | To view the backup images simultaneously when the download process is in progress, select the checkbox "Simultaneous Playback". You will see the backup images while the images are being downloaded to the PC or notebook. |
| | To simply backup images without previewing, deselect the checkbox "Simultaneous Playback". You will only see a message box indicating the total time needed, the current status and the saving location. |
| Download / Cancel | Click "Download" to start or "Cancel" to discard the video backup. |

Firmware Upgrade

This function is used to grade your DVR for function scalability.


Note: Before using this function, make sure you have the correct upgrade files provided by your installer or distributor.

Step1: Click "II", and select the IP address of your device in the address book.

Step2: Click "Step2" to show the upgrade page, "Update Server".



Step3: Click "Add" to browse to the upgrade files.

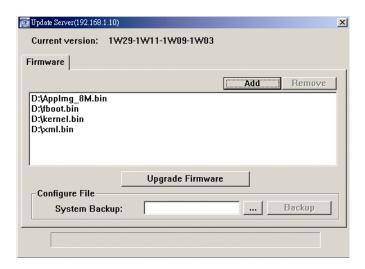

Step4: Click "Upgrade Firmware" to start firmware upgrade.

Note: It takes a few minutes to finish the upgrade process. Do not disconnect the power during firmware upgrade, or the upgrade may be failed. The device will reboot after the upgrade.

Step5: Select the IP address of the device and click "Select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the device and click select the IP address of the IP ad

6.1.4. E-Map

Video Viewer is also a Central Management System (CMS) software, which allows network device control & management for up to 16 devices simultaneously.

Note: Before using this function, make sure Video Viewer is connected to all the devices (up to 16) you want to monitor.

E-Map is **ONLY** available when the control panel is switch to the full function version.


How to Add an E-Map Group

STEP1: In the simplified version, click "• to switch the control panel to the full function version, and click "• " to enter the E-Map page as follows.

Note: To know where the buttons are, please refer to "Simplified Version (Default) at page 35, and "Full Function Version" at page 36.



STEP2: Right-click to show the shortcut menu on the top-left panel, and select the E-Map group you want to add. There are three E-Map groups you can add: Google E-MAP, Single E-MAP, and Building E-MAP.

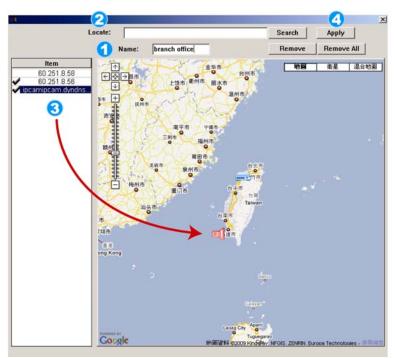


How to add a Google E-Map group:

- Enter the name of this Google E-Map group.
- Enter a specific address or landmark, and click "Search".


Move to the map and drag to the location you want.

- Click and drag the IP address to where it's located in the current level.
- Click "Apply" to save and finish.

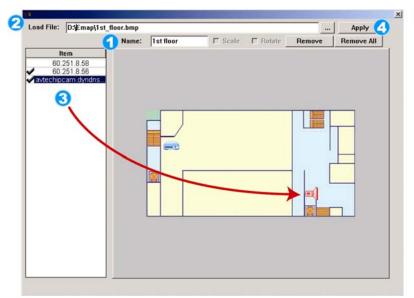

How to add a single E-Map group:

- Enter the name of this single E-Map group.
- Click "..." to browse the map file in BMP or JPEG.
- Click and drag the IP address to where it's located in the current level.
- Click "Apply" to save and finish.

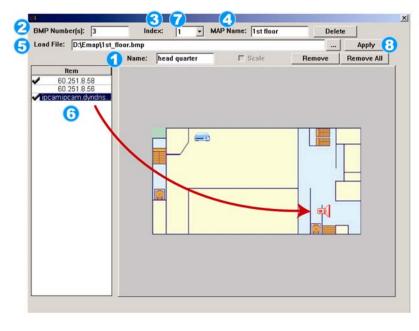

How to add a building E-Map group:

- Enter the name of this building E-Map group.
- Enter the total levels of this building.
- Select the level of the building from the drop-down list.
- Enter the name of the level.
- Glick "..." to browse the map file in BMP or JPEG.
- Click and drag the IP address to where it's located in the current level.
- Go back to STEP 3 to select other level of the building, and repeat from STEP 3 to 6 until the setup for all levels are finished.
- Click "Apply" to save and finish.

STEP3: When the E-Map group is created, you will see the tree on the top-left panel, showing all the devices you've added to this group.



| Icon | Description |
|------|--|
| | The connected device is camera. When it's selected, it will become red. |
| | The connected device is DVR. When it's selected, it will become red. |
| £ | For any motion or alarm event, it will appear on the screen to catch your attention. To know what's happening quickly, double-click the device icon on the E-Map to show the live view. |

How to Edit / Remove an Existing E-Map Group

For Google E-Map Group

Right-click on the group name to show the shortcut menu list, and select "Edit E-MAP" or "Remove E-MAP" as needed.

You can also add a single E-Map group (Add Single E-MAP) or Building E-Map group (Add Building E-MAP) into the existing Google E-Map group.




For Single E-Map Group

Right-click on the group name to show the shortcut menu list, and select "Edit E-MAP" or "Remove E-MAP" as needed.




➤ For Building E-Map Group

Right-click on the group name to show the shortcut menu list, and select "Edit Building E-MAP" or "Remove E-MAP" as needed.

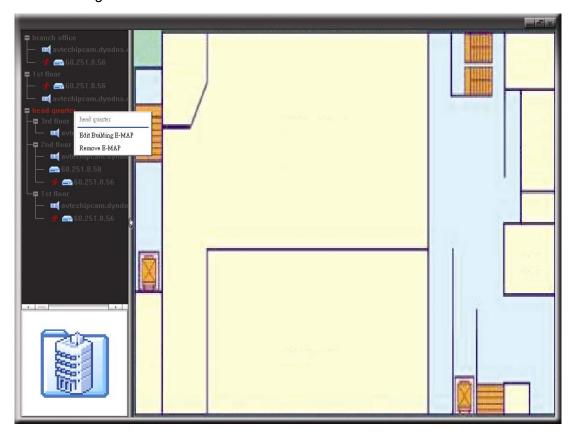

To edit or remove a certain level of the building E-Map group, right click on the level name, and select "Edit E-MAP" or "Remove E-MAP" as needed.

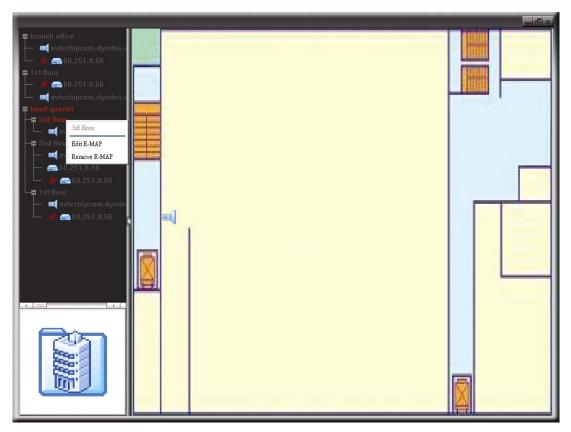

6.2 IE Web Browser

You can view the images or operate your DVR with IE web browser.


Note: The supported PC operation systems are Windows 7, Vista & XP.

Step 1: Key in the IP address used by your DVR in the URL address box, such as 60.121.46.236, and press Enter. You will be prompted to enter the user name and password to access the DVR.

If the port number your DVR used is NOT 80, you need to key in the port number additionally. The format is *ipaddress:portnum*. For example, for IP address 60.121.46.236 and port No. 888, please key in "http://60.121.46.236:888" into the URL address box, and press "Enter".

Step 2: Enter the user name and password, the same as the ones used for video viewer login, and click "OK". You will see a similar screen as the following when the login information is correct.


Note: Some buttons shown below are for selected models only.

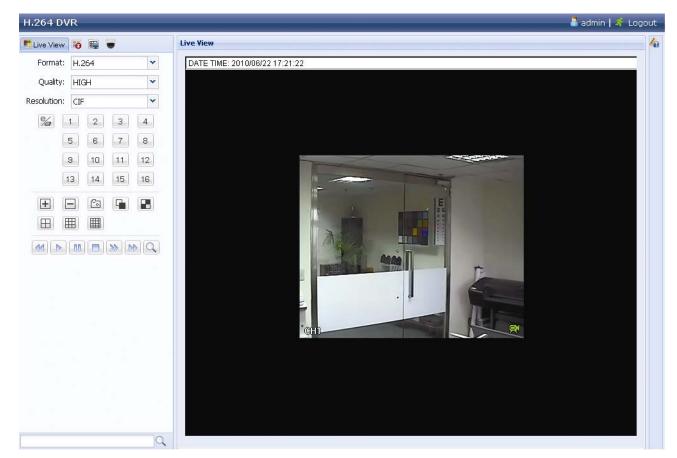

| Icon | Description |
|------|--|
| | Click to go to the live view of the DVR. |
| | Click to enter the playback panel where you can search or select the event you want to play and download to your PC simultaneously. For details, please refer to "6.2.1 Event Playback & Download" at page 48. |

| Icon | Description |
|------------------------|--|
| | Click to go to the detailed DVR setting. |
| • | Click to enter the PTZ mode. |
| Video Control | |
| Format | H.264 / QuickTime |
| | QuickTime is Apple Inc.'s multimedia software. You need to have QuickTime installed in you operation system first. When "QuickTime" is selected, you will be promoted to enter the user name and password to access the server of the DVR. |
| Quality | BEST / HIGH / NORMAL / BASIC |
| | Select the image quality. |
| Resolution | CIF: 352*240 pixels |
| Channel Control | |
| % | Click to enable the remote independent operation. This icon will turn to blue, and only the available function icons will be shown. |
| Channel Selection | Click one of the number to switch to the channel you want to see in full screen. |
| + / - | Click to go to the previous / next channel, or change setting. |
| | Click to take a snapshot of the current view, and save it to the specified path in your PC set in "F" → "General". |
| A , B | Click to display four channels at a time. |
| | Click to display each channel one by one, starting from CH1. When the last channel is displayed, it will start from CH1 again. |
| | To exit from this display mode, press any other channel display button. |
| ⊞,⊞,⊞ | Click to show 4-cut / 9-cut / 16-cut display. |
| Playback Control | |
| | Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 16X. |
| DD | Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 16X. |
| | Click to play the current video clip. |
| 00 | Click to pause the video playback. |
| | Click to stop the video playback. |
| 10 | Click to play the video clip slowly, once to get 4X slower, twice get 8X slower. |
| Q | Click to open the playback search panel. |

6.2.1 Event Playback & Download

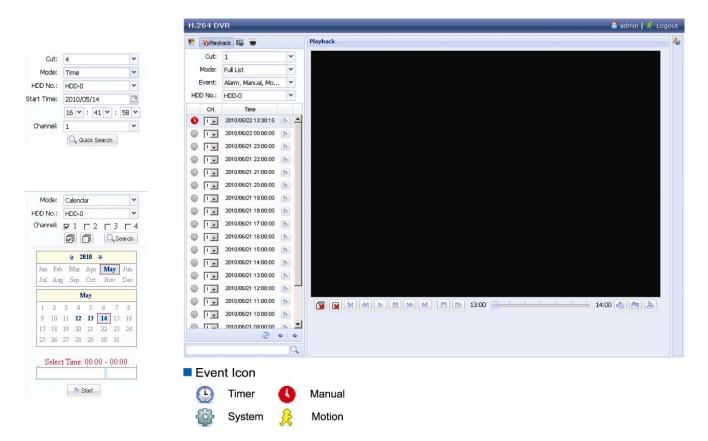

| 2 / 2 | Close all / Close | Click to close the current playback video clip (in the red frame), or to close all playback video clips. |
|---------------------|-------------------------|---|
| M / M | Previous / Next Hour | Click to jump to the next / previous time interval in an hour, for example, $11:00 \sim 12:00$ or $14:00 \sim 15:00$, and start playing the earliest event video clip recorded during this whole hour. |
| M | Fast Forward | Increase the speed for fast rewind. Click once to get 4X speed rewind and click twice to get 8X speed, etc., and the maximum speed is 16X. |
| | Fast Rewind | Increase the speed for fast forward. Click once to get 4X speed forward and click twice to get 8X speed, etc., and the maximum speed is 16X. |
| | Play | Click to play the current video clip. |
| 0.0 | Pause | Click to pause the video playback. |
| | Stop | Click to stop the video playback. |
| 44 | Step | In the pause mode, click to get one frame forward. |
| | Snapshot | Click to take a snapshot of the current view, and save it to the specified path in your PC set in "F" → "General". |
| 2 | Download | Click to download the current video clip to the specified path in your PC. |

APPENDIX 1 SPECIFICATIONS

> For 16CH Model

| | | | Model 1 | |
|--|--------------------------------|--|---|--|
| Video System | | | NTSC / PAL (auto detection) | |
| Video Compression Format | | | H.264 | |
| Video Input (composite video signal 1 Vp-p 7 | 5Ω BNC) | | 16 channels | |
| Video Output (Simultaneous | BNC | | YES | |
| output for LCD & CRT monitors) | VGA | | YES | |
| Dual Video Output | | | YES | |
| Audio Input / Output | | 2 | audio inputs / 1 audio output (Mono) | |
| Maximum Recording Rate (C | IF) | | 2×240 pixels with 480 IPS <ntsc> / 352×288 pixels with 400 IPS <pal></pal></ntsc> | |
| Image Quality Setting | | | BEST / HIGH /NORMAL | |
| Hard Disk Storage | | Accomm | nodates 1 SATA HDD (Capacity up to 2TB) | |
| Quick Search | | | Time / Motion / Alarm search mode | |
| SATA Interface | | | Built-in | |
| VGA Interface | | | Built-in | |
| Recording Mode | | Ma | nual / Timer / Motion / Alarm / Remote | |
| USB Mouse Control | | | YES | |
| Motion Detection Area | | 16 | × 12 grids per camera for all channels | |
| Motion Detection Sensitivity | | HIGH / NORMAL / LOW | | |
| Pre-alarm Recording | | YES | | |
| Backup Device | | USB 2.0 flash drive / Network | | |
| Web Transmitting Compression Format | | H.264 | | |
| Ethernet | | 10/100 Base-T. | Supports remote control and live view via Ethernet | |
| | | CMS: | Our self-developed and free software, "Video Viewer" | |
| Remote Surveillance | | Web Browser: | Internet Explorer, Mozilla Firefox, Google Chrome, Safari | |
| (Operating System: Windows 7 / Vista / XP; Apple Mac) | | Media Player: | QuickTime | |
| Timaono i i viola i i i, i i ppio mao) | | Max. on-line user: | 10 | |
| Mobile Surveillance | | | e with the web browsers on iPhone, BlackBerry, Vindows Mobile, Symbian & Android | |
| Network Protocol | | - | TCP/IP, PPPOE, DHCP and DDNS | |
| Remote Independent Operati | on | | YES | |
| Event Notification | | FTP / E-Mail | | |
| IR Remote Control | | YES (IR receiver built-in) | | |
| Remote Control ID | | | YES | |
| Picture Zoom | | | 2X digital zoom | |
| PTZ Control | | | YES | |
| Alarm I/O | | | 8 inputs, 1 output | |
| Key Lock (Password Protection | Key Lock (Password Protection) | | YES | |
| Local User Level | | Administrator & Operator | | |
| Video Loss Detection | | | YES | |
| Camera Title | | Supports up to 12 letters | | |
| Video Adjustable | | Hue / Saturation / Contrast / Brightness | | |
| | | 40 | | |

| | Model 1 |
|--------------------------|--|
| Date Display Format | YY/MM/DD, DD/MM/YY & MM/DD/YY |
| Daylight Saving | YES |
| Power Source (±10%) | DC 12V |
| Power Consumption (±10%) | < 36 W |
| Operating Temperature | 10°C ~ 40°C (50°F~104°F) |
| Dimensions (mm)** | 375(W) x 61(H) x 281(D) |
| System Recovery | System auto recovery after power failure |

^{*} The specifications are subject to change without notice. ** Dimensional Tolerance: ±5mm

> For 8CH Models

| | | Model 2 | Model 3 | Model 4 |
|---|-----------|--|---|-----------------|
| Video System | | | NTSC / PAL (auto detecti | on) |
| Video Compression Format | | H.264 | | |
| Video Input (composite video signal 1 Vp-p 7 | 5Ω BNC) | | 8 channels | |
| Video Output (Simultaneous | BNC | | YES | |
| output for LCD & CRT monitors) | VGA | | YES | |
| Dual Video Output | | | YES | |
| Audio Input / Output | | 2 au | dio inputs / 1 audio output | (Mono) |
| Maximum Recording Rate | FRAME | 704×480 pixels with 12 IPS <ntsc> / 704×576 pixels with 10 IPS <pal></pal></ntsc> | IPS <ntsc> /</ntsc> | |
| | CIF | | 240 pixels with 240 IPS < ×288 pixels with 200 IPS | |
| Image Quality Setting | | | BEST / HIGH /NORMA | L |
| Hard Disk Storage | | Accommod | ates 1 SATA HDD (Capa | city up to 2TB) |
| Quick Search | | Tim | ne / Motion / Alarm search | mode |
| SATA Interface | | | Built-in | |
| VGA Interface | | | Built-in | |
| Recording Mode | | Manua | al / Timer / Motion / Alarm | / Remote |
| USB Mouse Control | | YES | | |
| Motion Detection Area | | 16 × 12 grids per camera for all channels | | |
| Motion Detection Sensitivity | | HIGH / NORMAL / LOW | | |
| Pre-alarm Recording | | | YES | |
| Backup Device | | ı | JSB 2.0 flash drive / Netw | ork ork |
| Web Transmitting Compression | on Format | H.264 | | |
| Ethernet | | 10/100 Base-T. Supports remote control and live view via Ethernet | | |
| Demosts Over will an ac- | | CMS: O | CMS: Our self-developed and free software, "Video Viewer" | |
| Remote Surveillance (Operating System: | | Web Browser: In | | |
| (Operating System: Windows 7 / Vista / XP; Apple Mac) | | Media Player: Q | | |
| villadws / / vista / XI , Apple Mac) | | Max. on-line user: 10 | | |
| Mobile Surveillance | | Available with the web browsers on iPhone, BlackBerry, Windows Mobile, Symbian & Android | | |
| Network Protocol | | TCP/IP, PPPOE, DHCP and DDNS | | |
| Remote Independent Operation | on | YES | | |
| Event Notification | | FTP / E-Mail | | |
| IR Remote Control | | YES (IR receiver built-in) | | |
| Remote Control ID | | NO YES | | |
| Picture Zoom | | 2X digital zoom | | |
| PTZ Control | | YES | | |
| Alarm I/O | | 4 inputs, 1 output | | |
| Key Lock (Password Protection) | | YES | | |
| Local User Level | | Administrator & Operator | | |
| Video Loss Detection | | YES | | |
| Camera Title | | | Supports up to 12 letter | s |

| | Model 2 | Model 3 | Model 4 | |
|--------------------------|--|--|---------|--|
| Video Adjustable | Hue / Sa | Hue / Saturation / Contrast / Brightness | | |
| Date Display Format | YY/MM/DD, DD/MM/YY & MM/DD/YY | | | |
| Daylight Saving | YES | | | |
| Power Source (±10%) | DC 12V DC 19V | | DC 19V | |
| Power Consumption (±10%) | < 36 W < 64 W | | < 64 W | |
| Operating Temperature | 10°C ~ 40°C (50°F~104°F) | | | |
| Dimensions (mm)** | 345(W) x 68.3(H) x 225(D) | | | |
| System Recovery | System auto recovery after power failure | | | |

 $^{^{\}star}$ The specifications are subject to change without notice. ** Dimensional Tolerance: $\pm 5 \text{mm}$

> For 4CH Models

| | | Model 5 | | Model 6 | Model 7 |
|--|------------------|---|-------------|--|------------------------------|
| Video System | | | NTS | C / PAL (auto detection |) |
| Video Compression Format | | H.264 | | | |
| Video Input | | | | 4 channels | |
| (composite video signal 1 Vp-p | 75 Ω BNC) | | | 4 Channels | |
| Video Output | BNC | | | YES | |
| | VGA | | | YES | |
| Dual Video Output | | YES NO | | 10 | |
| Audio Input / Output | | 1 audio input / 1 audio output (Mono) | | lono) | |
| Maximum Recording Rate | FRAME | <ntsc> /</ntsc> | , | 704×480 pixels with 30 IPS <ntsc> / 704×576 pixels with 25 IPS <pal></pal></ntsc> | |
| | CIF | 352×240 pixels w | ith 120 IPS | S <ntsc> / 352×288 pixe</ntsc> | els with 100 IPS <pal></pal> |
| Image Quality Setting | | | BE | ST / HIGH / NORMAL | |
| Hard Disk Storage | | Accom | modates | 1 SATA HDD (Capacity | y up to 2TB) |
| Quick Search | | | Time / M | lotion / Alarm search m | iode |
| SATA Interface | | | | Built-in | |
| VGA Interface | | | | Built-in | |
| Recording Mode | | Manual / Timer / Motion / Alarm / Remote | | | |
| USB Mouse Control | | YES | | | |
| Motion Detection Area | | 16 × 12 grids per camera for all channels | | | |
| Motion Detection Sensitivity | | HIGH / NORMAL / LOW | | | |
| Pre-alarm Recording | | YES | | | |
| Backup Device | | USB 2.0 flash drive / Network | | | |
| Web Transmitting Compress | ion Format | H.264 | | | |
| Ethernet | | 10/100 Base-T. Supports remote control and live view via Ethernet | | | |
| | | CMS: Our self-developed and free software, "Video Viewer" | | | |
| Remote Surveillance | | Web Browser: | Internet E | Explorer, Mozilla Firefox, (| Google Chrome, Safari |
| (Operating System: Windows 7 / Vista / XP; Apple Mac) | | Media Player: QuickTime | | | |
| у рр. с с с | | Max. on-line user: 10 | | | |
| Mobile Surveillance | | Available with the web browsers on iPhone, BlackBerry, Windows Mobile, Symbian & Android | | | |
| Network Protocol | | TCP/IP, PPPOE, DHCP and DDNS | | | |
| Remote Independent Opera | tion | YES | | | |
| Event Notification | | FTP / E-Mail | | | |
| IR Remote Control | | YES (IR receiver built-in) | | | |
| Remote Control ID | | NO YES | | | |
| Picture Zoom | | 2X digital zoom | | | |
| PTZ Control | | YES | | | |
| Alarm I/O | | 4 inputs, 1 output | | | |
| Key Lock (Password Protection) | | YES | | | |
| Local User Level | | Administrator & Operator | | | |
| Video Loss Detection | | YES | | | |
| Camera Title | | Supports up to 12 letters | | | |
| Video Adjustable | | Hue / Saturation / Contrast / Brightness | | | |

APPENDIX 1 SPECIFICATIONS

| | Model 5 | Model 6 | Model 7 |
|--------------------------|--|--------------------|---------|
| Date Display Format | YY/MM/D | D, DD/MM/YY & MM/D | D/YY |
| Daylight Saving | YES | | |
| Power Source (±10%) | DC 12V DC | | DC 19V |
| Power Consumption (±10%) | <36 W | | <42 W |
| Operating Temperature | 10°C ~ 40°C (50°F~104°F) | | |
| Dimensions (mm)** | 345(W) x 68.3(H) x 225(D) | | |
| System Recovery | System auto recovery after power failure | | |

APPENDIX 2 COMPATIBLE USB FLASH DRIVE LIST

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table. If the USB flash drive is not supported by the DVR, the "USB ERROR" message will be shown on the screen.

Note: Please use your PC to format the USB flash drive as "FAT32".

Note: You can backup up to 2GB video data for one-time USB backup. To backup more data, please set the time & channel(s) you want, and start USB backup again.

| MANUFACTURER | MODEL | CAPACITY |
|--------------|---------------------|----------|
| Transcend | JFV35 | 4G |
| | JFV30 | 8G |
| Kingston | DataTraveler | 1G |
| PQI | U172P | 4G |
| Apacer | AH320 | 2GB |
| | AH320A | 8GB |
| | AH220 | 1GB |
| | AH320 | 4GB |
| A-data | RB-18 | 1GB |
| Sandisk | Cruzer Micro | 2G |
| | Cruzer Micro | 4G |
| | Cruzer4-pk | 2G |
| Netac | U208 | 1G |
| MSI | F200 | 4G |
| SONY | Micro Vault Tiny 2G | 2G |
| | Micro Vault Tiny 4G | 4G |
| | Micro Vault Tiny | 1G |

APPENDIX 3 COMPATIBLE SATA HDD LIST

Please upgrade the firmware of the DVR to the latest version to ensure the accuracy of the following table.

| MANUFACTURER | MODEL | CAPACITY | ROTATION |
|--------------|-----------------|----------|----------|
| Seagate | ST3320613AS | 320GB | 7200 rpm |
| | ST33500320AS | 500GB | 7200 rpm |
| | ST3750330AS | 750GB | 7200 rpm |
| | ST31000340AS | 1000GB | 7200 rpm |
| WD | WD3200AAKS | 320GB | 7200 rpm |
| | WD5000AACS | 500GB | 7200 rpm |
| | WD6400AAKS | 640GB | 7200 rpm |
| | WD7500AAKS | 750GB | 7200 rpm |
| | WD10EADS | 1TB | 7200 rpm |
| | WD15EADS | 1.5TB | 7200 rpm |
| | WD20EADS | 2TB | 7200 rpm |
| Maxtor | STM3500320AS | 500GB | 7200 rpm |
| | STM3750330AS | 750GB | 7200 rpm |
| HITACHI | HDT725032VLA360 | 320GB | 7200 rpm |
| | HDS721010KLA330 | 1000GB | 7200 rpm |

APPENDIX 4 MAIN MENU STRUCTURE

| | QUICK START | GENERAL | CHANNEL TITLE |
|----------|-------------------|--------------------------------|--|
| 5 | | | EVENT STATUS |
| | | | DATE DISPLAY |
| | | | MOUSE SENSITIVITY |
| | | | IMAGE SIZE (For Selected Models Only) |
| | | | QUALITY (For Selected Models Only) |
| | | | I.P.S. (For Selected Models Only) |
| | | | RECORD CONFIG (For Selected Models Only) |
| | | TIME SETUP | |
| | | TIME SETUP | DATE |
| | | | TIME |
| | DATE SETUP | DATE INFO | DISPLAY DATE OF MODE |
| | | | FORMAT |
| | | DAYLIGHT | DAYLIGHT SAVING |
| | SYSTEM | TOOLS | LANGUAGE |
| | | | ADMIN PASSWORD |
| | | | OPERATOR PASSWORD |
| | | | UPGRADE |
| | | | BACKUP CONFIG |
| | | | RESTORE CONFIG |
| | | SYSTEM INFO | BAUD RATE |
| | | STOTEM IN S | HOST ID |
| | | | AUTO KEY LOCK |
| | | | CLEAR HDD |
| | | | RESET DEFAULT |
| | | | |
| | | | REMOTE CONTROL ID (For Selected Models Only) |
| | | | SERIAL TYPE |
| | | | VIDEO FORMAT |
| | | D. 0.(4.17. D. 17.1. (4.10.1.) | VERSION |
| | | BACKUP DATA (USB) | |
| | | BACKUP LOG (USB) | |
| | EVENT INFORMATION | QUICK SEARCH | |
| | | EVENT SEARCH | |
| | | HDD INFO | |
| | | EVENT LOG | |
| <u>.</u> | ADVANCED CONFIG | CAMERA | BRIGHTNESS |
| | | | CONTRAST |
| | | | SATURATION |
| | | | HUE |
| | | | COV. |
| | | | REC |
| | | | CHANNEL TITLE |
| | | DETECTION | MOTION |
| | | | ALARM |
| | | | AREA |
| | | ALERT | EXT. ALERT |
| | | | INT. BUZZER |
| | | | KEY BUZZER |
| | | | VLOSS BUZZER |
| | | | MOTION BUZZER |
| | | | ALARM BUZZER |
| | | | HDD BUZZER |
| | | | ALARM DURATION (SEC) |
| | | | |
| | | NETWORK | HDD NEARLY FULL (GB) |
| | | NETWORK | NETWORK |
| | | | SNTP |
| | | | FTP |
| | | | E-MAIL |
| | | | DDNS |
| | | 57 | |

APPENDIX 4 MAIN MENU STRUCTURE

| | ADVANCED CONFIG | DISPLAY | FULL SCREEN DURATION |
|--------------------|------------------|-----------|---|
| | | | QUAD SCREEN DURATION (For 16CH & 8CH Models Only) |
| | | | DISPLAY COVERT |
| | | | HDD DISPLAY MODE |
| | | | DISPLAY OUTPUT PATH (For Selected Models Only) |
| | | RECORD | MANUAL RECORD |
| | | | EVENT RECORD |
| | | | TIMER RECORD |
| | | | EVENT RECORD IPS (For Selected Models Only) |
| | | | TIMER RECORD IPS (For Selected Models Only) |
| | | | PRE-ALARM RECORD |
| | | | OVERWRITE |
| | | | KEEP DATA LIMIT (DAYS) |
| | | | RECORD CONFIG (For Selected Models Only) |
| | | DEVICES | |
| | SCHEDULE SETTING | RECORD | |
| $oxed{\Theta}_{j}$ | | DETECTION | |
| | | ALARM | |

APPENDIX 5 DVR BATTERY REPLACEMENT

DVR time reset after power failure, for example, caused by a power outage, will cause the disorder of the recorded data, and users may have problems in searching the event clip they want. To keep the DVR time from resetting, a non-chargeable lithium battery, *CR2032*, is installed in the DVR.

However, the DVR time might still get reset when the DVR battery is low or even running out of power. If so, please replace the DVR battery, CR2032, <u>right away</u> as instructed below.

How to replace CR2032

Note: The lithium battery, CR2032, is a non-chargeable battery, and should be purchased separately. Please replace only with the same or equivalent type battery in case of danger.

Step1: Stop all DVR recording **immediately** to prevent the disorder of the recorded data. Then, back up the recorded data if necessary.

Step2: Power off the DVR, and disconnect the DVR power.

Step3: Remove the DVR cover, and find the battery on the mainboard.

Step4: Push the release as indicated below to remove the battery.



Type1



Type 2

Step5: Get a new battery and install it to the its slot on the mainboard.


- For Type 1, install it with the side of "CR2032" facing up as shown above.
- For Type 2, install it without the side of "CR2032" facing you as shown above.

Step6: Replace the DVR cover and connect to power.

Step7: Set DVR date & time, and resume recording. For details, please refer to 2.4 Date and Time Setting" at page 7, and "5.2 Record" at page 18.

APPENDIX 6 PIN CONFIGURATION

For Model 1

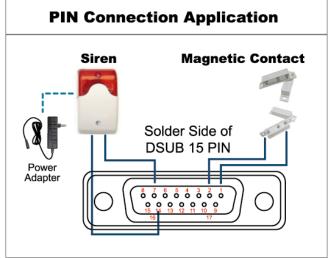

Siren:

When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.


Magnetic Contact:

When the magnetic contact is opened, the alarm will be triggered and the recording is on.

* The D-Sub connector shown above is optional.

| PIN | FUNCTION | DESCRIPTION | | |
|-------|-----------------------|---|--|--|
| 1 | GND | GROUND | | |
| • | GND | GROUND | | |
| | | Connect ALARM INPUT (PIN 2 – 5) and GND connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. | | |
| | | PIN Alarm Corresponding video channel | | |
| 2~5 | ALARM INPUT | PIN 2 7 CH7 | | |
| | | PIN 3 5 CH5 | | |
| | | PIN 4 3 CH3 | | |
| | | PIN 5 1 CH1 | | |
| | | ** | | |
| 6 | RS485-A | | | |
| 7 | EXTERNAL ALARM NO | Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A. | | |
| 8 | PIN OFF | NA | | |
| 9~12 | PIN 10 6 CH6 | | | |
| | | PIN 11 4 CH4 | | |
| | | PIN 12 2 CH2 | | |
| | | ** | | |
| 13 | RS485-B | | | |
| 14 | EXTERNAL ALARM COM | Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A. | | |
| | EXTERNAL ALARM NC | Under the normal operation, COM connects with NC and disconnects from NO. | | |
| 15 | | But when any alarm is triggered, COM disconnects with NC and connects with | | |
| | | NO. | | |
| | | Attention: The voltage restriction is under DC24V 1A. | | |
| 16~17 | GND | GROUND | | |
| 10-17 | OND | GIVOOIAD | | |

For Model 2 ~ 7

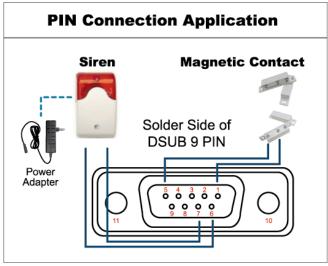

* The D-Sub connector shown above is optional.

Siren:

When the DVR is triggered by alarm or motion, the COM connects with NO and the siren with strobe starts wailing and flashing.

Magnetic Contact:

When the magnetic contact is opened, the alarm will be triggered and the recording is on.

| PIN | FUNCTION | DESCRIPTION | |
|-------|-----------------------|---|--|
| 1~4 | ALARM INPUT | Connect ALARM INPUT (PIN1 – 4) and GND (PIN5) connector with wires. Once an alarm is triggered, the DVR will start recording and the buzzer will be on. PIN Alarm Corresponding video channel PIN 1 1 CH1 PIN 2 2 CH2 PIN 3 3 CH3 PIN 4 4 CH4 | |
| 5 | GND | GROUND | |
| 6 | EXTERNAL ALARM COM | Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A. | |
| 7 | EXTERNAL ALARM NO | Under the normal operation, COM disconnects with NO. But when any alarm is triggered, COM connects with NO. Attention: The voltage restriction is under DC24V 1A. | |
| 8 | RS485-A | | |
| 9 | RS485-B | | |
| 10~11 | GND | GROUND | |